


По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72	Краснодар (861)203-40-90	Санкт-Петербург (812)309-46-40
Астана (7172)727-132	Красноярск (391)204-63-61	Саратов (845)249-38-78
Астрахань (8512)99-46-04	Курск (4712)77-13-04	Севастополь (8692)22-31-93
Барнаул (3852)73-04-60	Липецк (4742)52-20-81	Симферополь (3652)67-13-56
Белгород (4722)40-23-64	Магнитогорск (3519)55-03-13	Смоленск (4812)29-41-54
Брянск (4832)59-03-52	Москва (495)268-04-70	Сочи (862)225-72-31
Владивосток (423)249-28-31	Мурманск (8152)59-64-93	Ставрополь (8652)20-65-13
Волгоград (844)278-03-48	Набережные Челны (8552)20-53-41	Сургут (3462)77-98-35
Вологда (8172)26-41-59	Нижний Новгород (831)429-08-12	Тверь (4822)63-31-35
Воронеж (473)204-51-73	Новокузнецк (3843)20-46-81	Томск (3822)98-41-53
Екатеринбург (343)384-55-89	Новосибирск (383)227-86-73	Тула (4872)74-02-29
Иваново (4932)77-34-06	Омск (3812)21-46-40	Тюмень (3452)66-21-18
Ижевск (3412)26-03-58	Орел (4862)44-53-42	Ульяновск (8422)24-23-59
Казань (843)206-01-48	Оренбург (3532)37-68-04	Уфа (347)229-48-12
Калининград (4012)72-03-81	Пенза (8412)22-31-16	Хабаровск (4212)92-98-04
Калуга (4842)92-23-67	Пермь (342)205-81-47	Челябинск (351)202-03-61
Кемерово (3842)65-04-62	Ростов-на-Дону (863)308-18-15	Череповец (8202)49-02-64
Киров (8332)68-02-04	Рязань (4912)46-61-64	Ярославль (4852)69-52-93
	Самара (846)206-03-16	

Единый адрес: gct@nt-rt.ru **Веб-сайт:** www.galltec.nt-rt.ru

Гигро-термостат DUO 1060 GALLTEC+MELA. Техническое описание

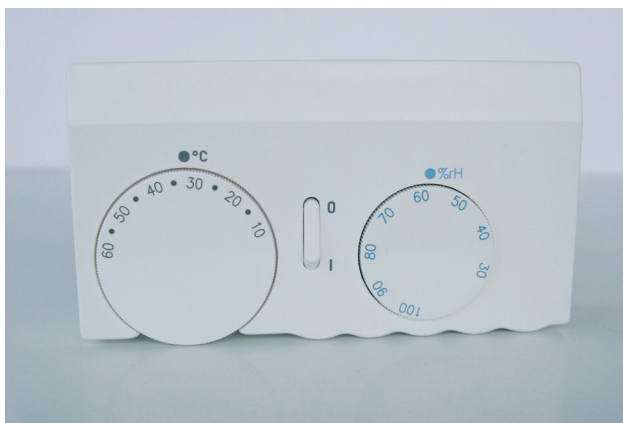


Product info sheet

Room Hygro-Thermostat DUO 1060


scale range for humidity 30 ... 100 % rh
scale range for temperature 10 ... 60° C

The hygro-thermostat type **DUO 1060** is used as an on-off controller to control the relative air humidity and the temperature. Typical areas of use are climatic cabinets, the control of air humidifiers and dehumidifiers in office facilities and computer rooms, storage of foodstuffs and luxury foods, cooling rooms for fruit and vegetables, green-houses for gardening use, the textile industry, the paper and printing industry, the film industry, hospitals and many more. The hygro-thermostat **DUO 1060** can be used almost anywhere that air humidity has to be regulated or monitored.

Dimensions diagram

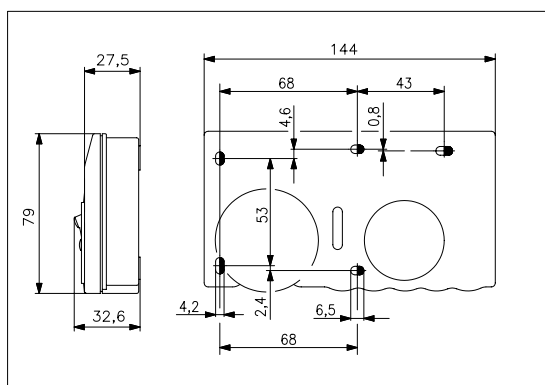

Connection diagram

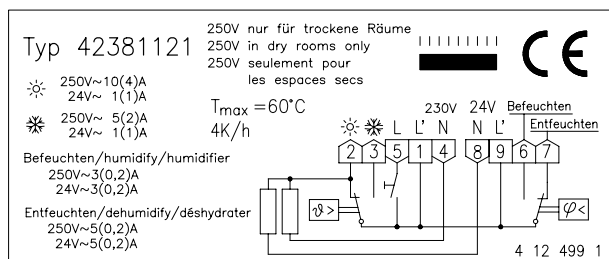

Maintenance

The measuring element is maintenance-free in pure ambient air. Aggressive media containing solvent can cause measuring errors and failure, depending on the type and concentration. Deposits which eventually form a water-repellent film over the sensor are harmful. Such substances are resin aerosols, lacquer aerosols, smoke deposits etc.

NOTE

Contact with the inner parts of the humidistat nullifies the warranty.

Technical Data

Humidity

scale range 30...100%rh
range of operation 35...95%rh
measuring element Polyga®-measuring element,
water resistant
measuring accuracy +/-3.0%rh
switch changeover contact
switching difference (microswitch)
referring to 50%rh approx. 4%rh
breaking capacity 250 V
humidify 3 (0.2) A
dehumidify 5 (0.2) A

breaking capacity, min 100mA, 20DC/AC
medium temp. coefficient -0.2%/K ref. to 20°C and 50%rh
allowable air speed 15m/sec

Temperature

scale range +10 ... +60° C
measuring element thermobimetal
switch changeover contact
switching difference approx. 1K
breaking capacity 250 V
heating 10 (4) A
cooling 5 (2) A
breaking capacity, min
heating and cooling 1 (1) A

General Data

operating voltage 24 or 250 V AC
50/60 Hz

Please observe the notes on voltage !

mounting wall mounting, preferably with
ventilation slots at right angles to direction of airflow
fixing slots in housing base
contacting connecting terminals in the housing
housing impact-resistant plastic, light grey
protective system IP30
weight 0.121 kg

Notes on voltage

The measurement location of the humidity controller should be selected such that there is no build-up of condensate on or in the device. This applies particularly for operation with a voltage higher than 48V. If the voltage is higher, there is a risk of voltage arcing in the event of water condensation on the microswitch or connecting terminals which might destroy the controller. In the case of voltage below 48V, the humidity controller can be used up to 100%RH.

По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72	Краснодар (861)203-40-90	Санкт-Петербург (812)309-46-40
Астана (7172)727-132	Красноярск (391)204-63-61	Саратов (845)249-38-78
Астрахань (8512)99-46-04	Курск (4712)77-13-04	Севастополь (8692)22-31-93
Барнаул (3852)73-04-60	Липецк (4742)52-20-81	Симферополь (3652)67-13-56
Белгород (4722)40-23-64	Магнитогорск (3519)55-03-13	Смоленск (4812)29-41-54
Брянск (4832)59-03-52	Москва (495)268-04-70	Сочи (862)225-72-31
Владивосток (423)249-28-31	Мурманск (8152)59-64-93	Ставрополь (8652)20-65-13
Волгоград (844)278-03-48	Набережные Челны (8552)20-53-41	Сургут (3462)77-98-35
Вологда (8172)26-41-59	Нижний Новгород (831)429-08-12	Тверь (4822)63-31-35
Воронеж (473)204-51-73	Новокузнецк (3843)20-46-81	Томск (3822)98-41-53
Екатеринбург (343)384-55-89	Новосибирск (383)227-86-73	Тула (4872)74-02-29
Иваново (4932)77-34-06	Омск (3812)21-46-40	Тюмень (3452)66-21-18
Ижевск (3412)26-03-58	Орел (4862)44-53-42	Ульяновск (8422)24-23-59
Казань (843)206-01-48	Оренбург (3532)37-68-04	Уфа (347)229-48-12
Калининград (4012)72-03-81	Пенза (8412)22-31-16	Хабаровск (4212)92-98-04
Калуга (4842)92-23-67	Пермь (342)205-81-47	Челябинск (351)202-03-61
Кемерово (3842)65-04-62	Ростов-на-Дону (863)308-18-15	Череповец (8202)49-02-64
Киров (8332)68-02-04	Рязань (4912)46-61-64	Ярославль (4852)69-52-93
	Самара (846)206-03-16	

Единый адрес: gct@nt-rt.ru **Веб-сайт:** www.galltec.nt-rt.ru